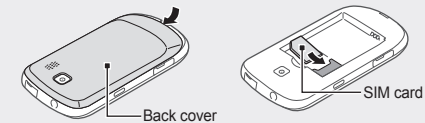 


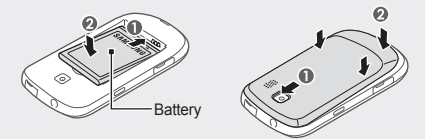 


## Install the SIM card and battery

- Remove the back cover and insert the SIM card.

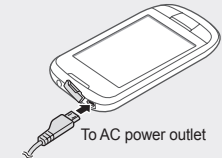 


- Insert the battery and replace the back cover.



## Charge the battery


- Plug the supplied travel adapter.
- When charging is finished, unplug the travel adapter.



## Adjust the volume

### To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Select the profile you are using.

 If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.


- Drag the slider under **Ringtone** to adjust the volume level and select **Set**.

### To adjust the volume of the touch tone

In Idle mode, press the Volume key to adjust the volume.


### To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

 In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Select the profile you are using.

 If you are using the silent or offline profile, you are not allowed to change the ringtone.

### To view text or multimedia messages

- In Menu mode, select **Messages** and select a contact.
- Select a text or multimedia message.

## Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

### To activate the fake call feature

In Menu mode, select **Settings** → **Applications** → **Call** → **Fake call** → **Fake call hot key**.


### To make a fake call

In Idle mode, press and hold the Volume key down.

## Activate the mobile tracker


This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.

 
-  While the phone is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- Do not remove the battery while connected to the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

## Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

-  Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- Open the cover to the memory card slot on the side of the phone.
- Insert a memory card with the gold-colored contacts facing up.



- Select **Ringtone**.
- Select a memory location (if necessary).
- Select a ringtone and select **Set**.


To switch to another profile, select it from the list.

## Call a recently dialed number

- In Idle mode, press **[↶]** to display a list of recent numbers.
- Scroll up or down to a number or name.
- Select the number or name to view details of the call or press **[↶]** to dial the number.

## Use widgets


Learn to use widgets on the idle screen.

-  Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

### To open a widget

- In Idle mode, scroll left or right to a panel of the idle screen.
- Select a widget to activate on the idle screen.

 
- Enter your password and select **Done**.

 The first time you access Mobile tracker, you will be prompted to create and confirm a password.

- Select **Accept** when the terms and conditions appears.
- Select **Recipients** → **Contacts**. You can also enter a phone number including a country code (with +) in the recipient list. Skip to step 6.
- Select contacts → **Add**.
- When you are finished setting the recipients, select **OK**.
- Select **Sender** and enter a sender's name.
- Select **Save**.

## Use the camera



 
 
### To capture photos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone counterclockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Select  to take a photo. The photo is saved automatically.

- Push the memory card in the memory card slot until it locks in place.


- Close the cover to the memory card slot.


## Instructional icons

	<b>Caution:</b> situations that could cause damage to your phone or other equipment
	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Compose</b> (represents <b>Messages</b> , followed by <b>Compose</b> )
	<b>Square brackets:</b> phone keys; for example: <b>[↶]</b> (represents the End key)

## Use the touch screen

Learn basic actions to use the touch screen.

-  To avoid scratching the touch screen, do not use sharp tools.

-  For the optimal use of the touch screen, remove the protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

 
 

 
### To organize your widget

You can organize each panel of the idle screen with your favorite widgets.

- In Idle mode, select **Widget** at the top left of the screen to open the widget toolbar.
- Read the widget disclaimer and select **Accept** (if necessary).
- Scroll left or right on the widget toolbar to find the widget you want to use.
- Drag the widget to the idle screen.
- Select **Done** at the top left of the screen.

## Enter text

 
 
 
### To change the text input mode

- Select  to change the input language.
- Tap and hold  and select **Keyboard type** → a text input method.
- Tap and hold  and select **Predictive text** to turn on T9 mode.
- Tap and hold  and select **Continuous input** to switch to Continuous input mode. When Predictive text mode is activated, you can use Continuous input mode.
- Select **123** to switch to Number mode. Select **?#+** to switch to Symbol mode.

### To view photos

In Menu mode, select **My files** → **Images** → a photo file.

 
### To record videos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone counterclockwise to landscape view.
- Select  to switch to Recording mode.
- Aim the lens at the subject and make any adjustments.
- Select  to start recording.
- Select  to stop recording. The video will be saved automatically.

### To view videos

In Menu mode, select **Video player** or **My files** → **Videos** → a video file.

## Listen to the FM radio

- Plug the supplied headset into the phone.
- In Menu mode, select **FM radio**.
- Select  to turn on the FM radio.

- Tap: Touch once to select or launch a menu, option, or application.

- Tap and hold: Tap an item and hold it for more than 2 seconds.

- Drag: Tap and hold on an item, and then drag your finger to move the item.

## Turn your phone on or off

To turn your phone on,

- Press and hold **[⓪]**.
- Enter your PIN and select **Done** (if necessary).
- Follow the on-screen instructions to set up your phone.

To turn your phone off, press and hold **[⓪]** and select **Yes**.


## Access menus

To access your phone's menus,

- In Idle mode, press the Menu key to access Menu mode.
- Scroll left or right to a main menu screen. You can also select a dot on the top of the screen to move to the corresponding main menu screen directly.

- Select a menu or application.

- Select **Back** to move up one level; Press **[↶]** to return to Idle mode.

-  When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Make a call

- In Idle mode, select **Keypad** and enter an area code and a phone number.
- Press **[↶]** to dial the number.
- To end the call, press **[↶]**.

## Answer a call

- When a call comes in, press **[↶]**.
- To end the call, press **[↶]**.

 
## Add a new contact

 The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** →  → **Settings** → **Memory in use** → **Save new contacts to** → a memory location.

- In Idle mode, select **Keypad** and enter a phone number.
- Select **Add to Contacts** → **Create contact**.
- Enter contact information.
- Select **Done** to add the contact to memory.

 
## Send and view messages

### To send a text or multimedia message

- In Menu mode, select **Messages** → **Compose**.
- Select **Contacts**.
- Select the check boxes next to contacts and select **Add**.
- Select **Tap to add text**.
- Enter your message text. *See "Enter text"* For sending as a text message, skip to step 7. For attaching multimedia, continue with step 6.
- Select  and add an item.
- Select **Send** to send the message.

## Set and use alarms

### To set a new alarm

- In Menu mode, select **Clock** → .
- Select **Create**.
- Set the details of the alarm and select **Save**.

 
### To stop an alarm


When the alarm sounds,

- Tap and hold **Stop** to stop the alarm.







- Tap and hold **Snooze** to silence the alarm for the snooze period.

### To deactivate an alarm

- In Menu mode, select **Clock** → .
- Select the clock icon next to the alarm you want to deactivate.

 The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio using the following icons and keys:

Icon/Key	Function
	Set the FM radio to automatically retune frequencies for stations when the current signal is weak
	Turn the FM radio on or off
	Search for an available radio station
	Fine-tune the frequency
	Change the sound output to headset or phone's speaker
	Adjust the volume